

CC Number	Value
CC-0	[0-127]
CC-32	[0-127]
CC-80	[1-127]
CC-81	[1-127]
CC-82	[0-127]
CC-83	[0-127]
CC-96	[1-127]
CC-97	[1-127]
CC-98	[0-127]
CC-99	[0-127]
CC-106	[0-127]
CC-107	[0-127]
CC-108	[0-100]
CC-109	[0-100]
CC-110	[0-127]
CC-111	[0-127]
CC-112	[1-127]
CC-113	[1-127]
CC-114	>0
CC-115	[1-127]
CC-116	[1-127]
CC-117	[1-127]

0

Action	Firmware version added
Bank (Song folder) Select MSB	1.8.5
Bank (Song folder) Select LSB	1.8.5
Tempo Increment (NewTmpto = Tempo + value)	2.7.0
Tempo Decrement (NewTmpto = Tempo - value)	2.7.0
0: Return to normal mode	2.7.0
0: Return to normal mode	2.7.0
Data increment (+1) – INC	1.8.5
Data decrement (-1) – DEC	1.8.5
NRPN_LSB	1.8.5
NRPN_MSB	1.8.5
Tempo MSB	1.8.5
Tempo LSB	1.8.5
Change the Mixer Volume (Main Volume knob)	1.8.5
Change the Headphone Volume	1.8.5
Triggers an accent hit with a volume from the value 0 (mute) to	1.8.5
Pause / Unpause the current song	1.8.5
Triggers a drum fill	1.8.5
Starts song transition	1.8.5 2.7.0
Quits the transition and go to specified part	
Starts the playback of the current song	1.8.5
Triggers the outro of the song	1.8.5
Selects a specific drumset	1.8.5
Enters Tap Tempo mode and generate Tap Event	1.8.5

Pedal Action	MIDI OUT	MIDI code	Notes
Intro fill	Start, after intro ends	FA	106 107 108 109 110 111 112 113 115 117

MIDI IN	MIDI Code	RESULT
Start	FA	Current Song Part starts playing
Tempo (MSB)		
Tempo (LSB)		
Mix Vol		
HP Volume		
Accent Hit		
Pause/Unpause		
Drum Fill		
Transistion		
Outro		
Tap Tempo		

Notes